


Screen Upgrade Instructions - Thruxton 1200 R.

Firstly, remove the standard screen.


New fasteners are provided for all 8 hole locations. Remove the rubber well-nuts as these will be replaced by fasteners.

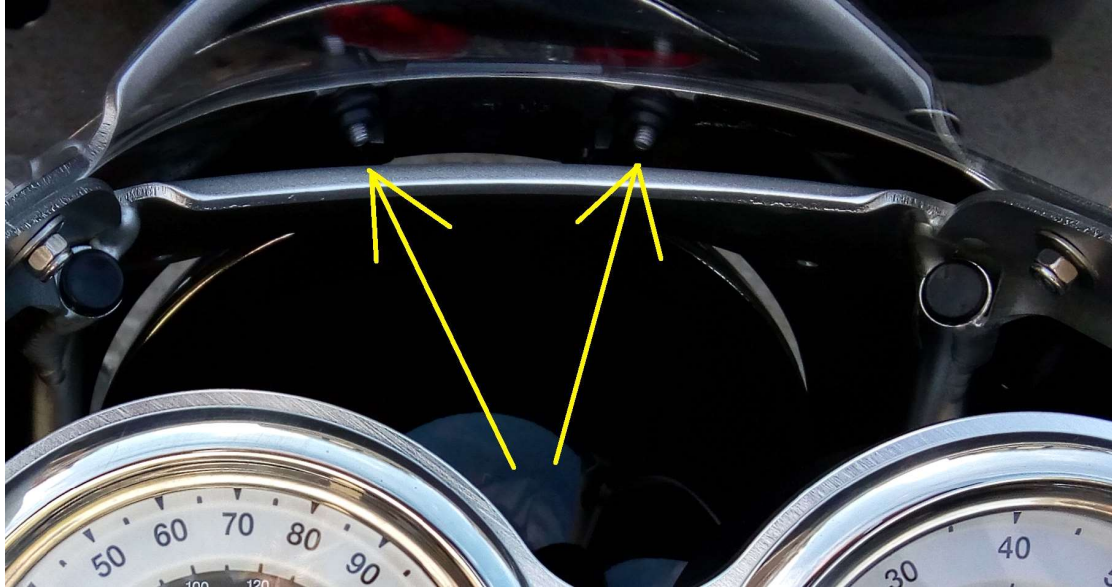

Position the screen between the metal support arms and the fairing, taking care to align the screen holes adjacent to the fairing holes.

Loosely fit the 8 fasteners, using the metal washers and lock-nuts on the inside of the screen.

Please note that there are 4 longer fasteners to go through the metal frame, the other 4 are the same but slightly shorter.

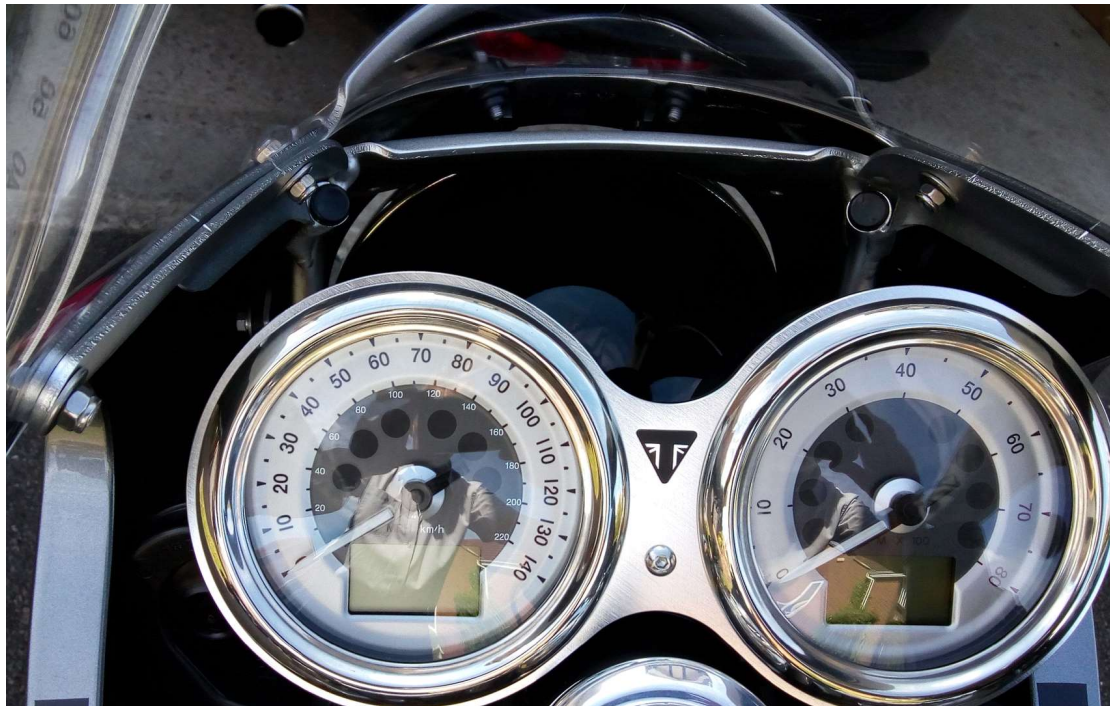

Make sure that the lower edge of the screen fits slightly underneath (or just touching) the lower fairing section and tighten the lock-nuts - take care not to over-tighten, just enough to prevent movement.

END